Granvista *Plus*GVP-270 Quick Installation Guide

Granvista Plus

Package Contents

When you get this Network Camera, you must double check the following items are present.














Precautions before startup

- a. Turn the power off immediately in case any odor or smokes are detected.
- b. Never drop, shake or strike on the camera
- c. Do not touch the camera in case there are lightening or storms outside
- d. Never spray any liquid on the camera body

Hardware Connection

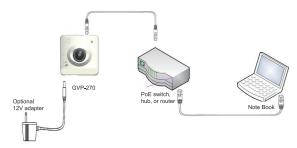


- a. Make both camera and PC connected to a local network through the RJ45 port. This camera supports PoE thus it can be powered by a PoE switch. If there is no PoE switch available then an 12V/1A adapter will be needed to feed into the camera's power jack.
- b. The LED status light should come up if the camera is properly powered.

How to mount the GVP-270?


There are many ways of installing the GPV-270, wall mount, ceiling mount or desktop mount.

Wall mount / Ceiling mount

You may install the GVP-270 on the wall by securing the mounting bracket with the screws inside its packing box. A coin can be very helpful when you want to adjust the view angle.

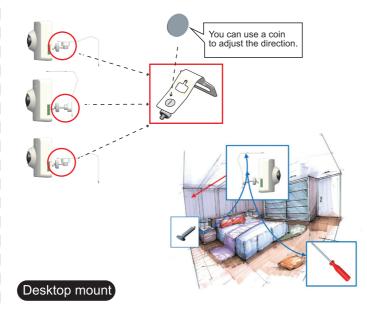

You may install the GPV-270 simply on a desktop if you want

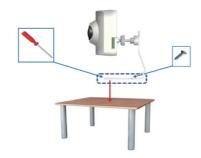

Software Installation

The following software is necessary for the proper display and use of the GVP-270 from the Web site. The software can be found in the Software Package CD.

IP Installer

The IP Installer is used to locate and configure network cameras in the LAN. This utility is useful for conveniently configuring the network settings of the device, or for finding a device once the network settings have been modified.

To install the IP Installer software, simply click its "setup" program from the respective IP Installer folder in the CD, and then complete the whole installation process.

K-Lite Codec Pack

K-Lite Codec tool is able to encode and/or decode audio and video data. The K-Lite Codec is designed as a user-friendly solution for playing almost all of your movie files downloaded from web.

(VLC)

It is a good software, but not necessarily required, this VLC can be used for streaming without a web browser. VLC uses RTSP protocol which is different from HTTP protocol. The user may configure the path for video/audio streaming accordingly.

Network Configuration


- ★ Using IP Installer to assign IP address
- a. Simply click its upper "Device Search" tool bar to search the device inside the LAN.
- b. The firewalls of your Windows or Anti-virus software might block IP Installer from searching the cameras. In this case you would need to unblock IP Installer software from the firewalls, or to manually make this IP Installer software an exception to the firewalls.
- c. Select the device with the MAC Address corresponds to the camera that is to be configured.


Device Search											
	Model Name	IP Address	MACAddress	- Fictionare	SobnetMask	Gateway	DNS1	DNS2	DNS3	Http Port	
▶ 1	GYP-270		00-04-29-06-18-11	2.1.0215_gvpmb			168.95.1.1				
2	GYP-201	192.168.1.100	00-04-29-11-56-01	2.1.1_789_gvp	255.255.255.0	192.168.1.1	168.95.1.1	61.31.1.1	61.31.233.1	78	
	OTTO COM	100.100.1.100	00.04.00.14.3.01	000.000	000.000.000.0	100 100 1 1	100.05.1.1	C1 31 1 1	C1 21 022 1	000	

d. Set the camera newly found, right-click it, and then choose the "Single Device Setting" from the slide-bar manual.

	Device Sourth.										
П	Model Name	IP Address	MACAddress	Fictions	SubmetMask	Gateway	DNS1	DNS2	DNS3	Http Port	
1	GYP-201	192.168.1.097	00-04-29-1e-4c-01	2.1.1_789_gvp	255 255 255 0	192.168.1.1	168.95.1.1	61.31.1.1	61.31.233.1	80	
2	GYP-270	192.168.1.020	00-04-29-06-18-11	Device Search Batch Device Setting Single Device Setting		192.168.1.1	168.95.1.1	61.31.1.1	61.31.233.1	80	
3	GYP-231	192.168.1.020	00-04-29-14-cd-01			192.168.1.1	168.95.1.1	613111	61.31.233.1	80	
4	GYP-201W	192.168.1.057	00-04-29-1e-35-01			192.168.1.1	168.95.1.1	61.31.1.1	61.31.233.1	80	
				Open web							
Total	4 Devices			Language							

e. After filling in the properties, click [Set] button to complete the configuration settings. Please note that the Subnet Mask and Gateway settings must be same as the PC's network settings, and the first three digits of the network camera's IP address must be the same as the PC's IP address.

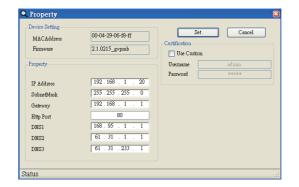

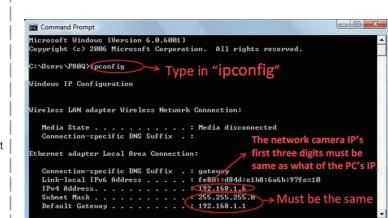

Open the Web-based User-Interface Program

a. To access the web-based user-interface program such as the Microsoft Internet Explorer, right-click for the slide-bar manual, and then choose the "Open web" function to open the program.






- * Username and password are required. (Default are "admin" and "admin")
- b. For first-time user, there will be a prompt to install the ActiveX control to the web browser.Confirm the installation as it is required to view the video stream and some operations.



- c. Verify and complete the installation from your browser.

 If not able to get the ActiveX downloaded properly, user must temporarily lower the security settings to perform a one-time-only installation of the ActiveX component onto the PC, as described below:
- From the Tools menu, select [Internet Options] -> [Security] -> [Custom Level].
- Set the security level to Low and click [OK].
- Depends on different versions of browser software used, the user may have to set the individual ActiveX settings from "Disable" to "Prompt" or "Enable" if necessary for completing the ActiveX program download.
- Restore the security level after the ActiveX installation.
- d. If the device has been configured correctly, the default web browser will open to the home page of the selected device.

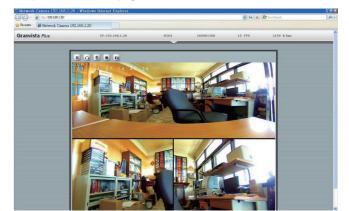

Attention:

As our products are subject to continuous improvements for excellence , information in this document is subject to change without notice.