Fingerprint Lock Manual

Thank you for purchasing our products. The default of this product is none account status, any fingerprint can be unlocked. Your finger will become the key after setting. The first user's fingerprint is the administrator's fingerprint, all new fingerprint need be confirmed by administrator.
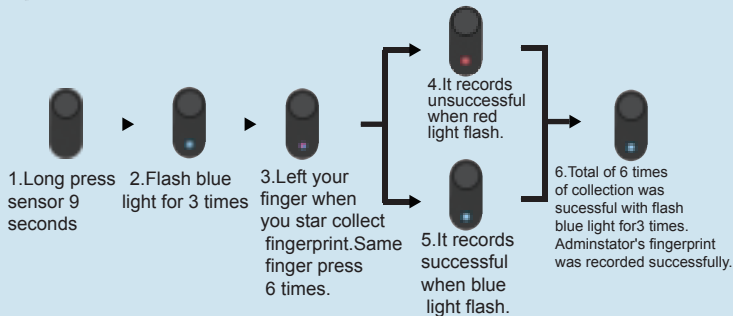
Collect fingerprint tips

Indicator

Different indicator represents different devices and status.Please check the details as below chart:
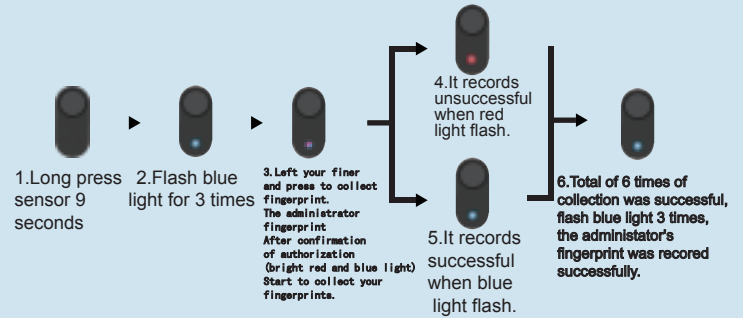
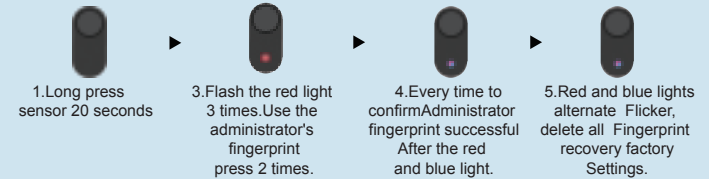| Indicator Status	Indicator Status
Low power	Red light and blue lights flashed alternately
Charging	Blue lights breathe brightly
Full charged	Blue light always on
Fingerprint acquisition mode	Flash blue light for 3 times
Fingerprint collection successful	Blue light
Administrator fingerprint authorization	Red blue light
Unlock success	Blue light
Delete fingerprint mode	Red light
Failed to collect fingerprint	Red light

Description Of First Administrator's Fingerprint Record

1.Long press sensor 9 seconds

2.Flash blue light for 3 times

3.Left your finger when you star collect fingerprint.Same finger press 6 times.

4.It records unsuccessful when red light flash.

5.It records successful when blue light flash.

6.Total of 6 times of collection was sucessful with flash blue light for3 times. Adminstator's fingerprint was recorded successfully.

Fingerprint Recording Instructions

（The first and second fingerprints are the administator fingerprint by default.）

1.Long press sensor 9 seconds

2.Flash blue light for 3 times

3.Left your finer and press to collect fingerprint. The administator fingerprint After confirmation of authorization (bright red and blue light) Start to collect your fingerprints.

4.It records unsuccessful when red light flash.

5.It records successful when blue light flash.

6.Total of 6 times of collection was successful, flash blue light 3 times, the administator's fingerprint was recored successfully.

Delete fingerprint/Factory Reset

1.Long press sensor 20 seconds

3.Flash the red light 3 times.Use the administrator's fingerprint press 2 times.

4.Every time to confirmAdministrator fingerprint successful After the red and blue light.

5.Red and blue lights alternate Flicker, delete all Fingerprint recovery factory Settings.

Question

Question	Reason	Solution
Touch the fingerprint sensor, The indicator light is not on	No power	Please charge the fingerprint padlock
	Stand by	Please touch the fingerprint reader
Can not be rechargeable	Is there any foreign matter at the charging port	Please keep the charging port clean and tidy
Can not unlock	Your finger is too try.	Please rub or breathe on your fingers
	Your fingers are too wet	Please wipe the sweat or water off your fingers
	Dirty fingerprints	Please keep your fingers clean
	The fingerprint sensor is not clean	Please wipe off the fingerprint reader.

Features of functions

- [Your fingerprint]is the key.] Fingerprint Unlock, convenient.

- [High Capacity] Support 20 sets fingerprints

- [Waterproof and dustproof] Up to IP65 level waterproof can prevent the dust and rain efficiently.

- [1 second to unlock] Super CPU, good recognition, low error rate.

- [Low power consumption] Full charge can provide 3000 switch lock operation.